

Applications of RAM Mixing Power

Justin Whaley
Engineering Manager
Resodyn Corporation




Technical
InterChange 2026

1

What is Mix Power?

- RAM Mixing uses an oscillating spring/mass stack on mechanical resonance to facilitate mixing
- Power transmission is driven by the Resonator but is dependent on mixing parameters
- The affect of these mixing parameters on your mix can be un-intuitive.

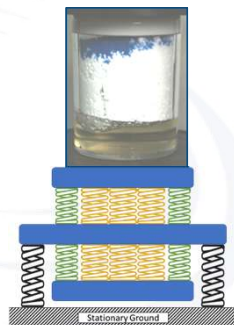

2

Technical
InterChange 2026

2

Most RAM Mixing Vessels Are Opaque


- Traditional inspection of the mixing phenomenon has been based on analysis of the final product, experience, or visual observation.
- Mix Power is a quantitative measure of the rate at which energy is transferred to the system.



Jacketed



OmniRAM
& RAMS



Continuous



Mix in Case



3

Technical
InterChange 2026

3

Power Into the Mix

200 gm Sugar & 1 gm Iron Oxide



Acceleration: 80 g
Mix Time: 6 sec
Avg. Mix Power: 82 W


Acceleration: 40 g
Mix Time: 21 sec
Avg. Mix Power: 24 W

Acceleration: 20 g
Mix Time: 68 sec
Avg. Mix Power: 7 W

4

Power into the Mix


- Is the total energy used to mix constant?
 $Energy = Power * Time$

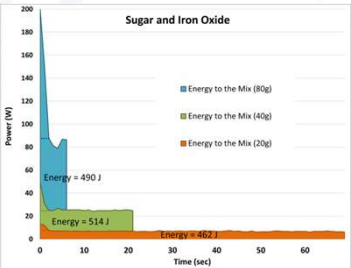

5

Power Into the Mix

80 gm Powder Sugar, 80 gm Corn Syrup & 2 gm Iron Oxide

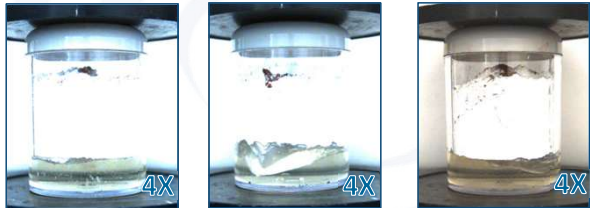

Acceleration: 100 g
Mix Time: 40 sec
Avg. Mix Power: 72 W


Acceleration: 80 g
Mix Time: 62 sec
Avg. Mix Power: 41 W

Acceleration: 65 g
Mix Time: 90 sec
Avg. Mix Power: 30 W

6

Power Into the Mix

$$\text{Energy} = \text{Power} * \text{Time}$$

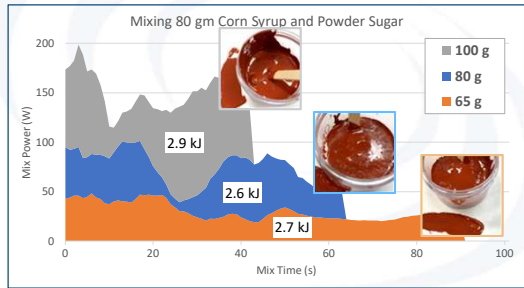

7

Four Uses For Mix Power

1. Optimizing Mixing Parameters and Mixture Ingredients for Production
2. Identify Changes to the Mix Regime
3. Identifying Changes in Material Properties
4. Check for Irregularities in Mixing Performance for Established Processes

8

1. Optimizing Mix Parameters

Question:


How can you determine the optimal vacuum for cohesive powders?



9

1. Optimizing Mix Parameters


Mix Power Helps Identify the Optimal Vessel Pressure

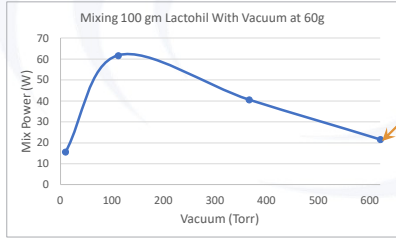

10

1. Optimizing Mix Parameters


Mix Power Helps Identify the Optimal Vessel Pressure

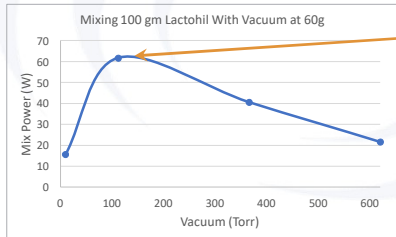

11

1. Optimizing Mix Parameters

Mix Power Helps Identify the Optimal Vessel Pressure

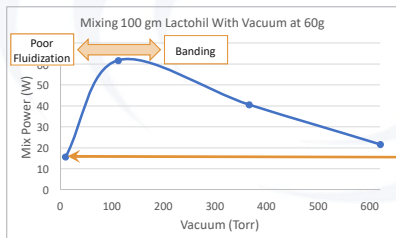

12

1. Optimizing Mix Parameters

Question:

How can you determine the optimal fill level for liquid, paste, or powder mixes?



80% Fill
Mixing at 35g



100% Fill
No Mixing at 35g




13

Technical
InterChange 2026

13

1. Optimizing Mix Parameters

Mix Power Help Identifies the Optimal Fill

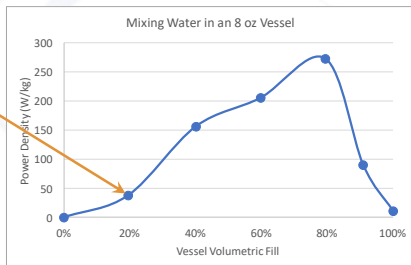



14

Technical
InterChange 2026

14

1. Optimizing Mix Parameters

Mix Power Help Identifies the Optimal Fill

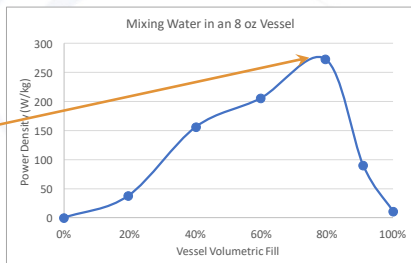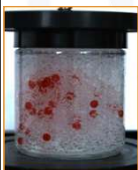


15

Technical
InterChange 2026

15

1. Optimizing Mix Parameters

Mix Power Help Identifies the Optimal Fill

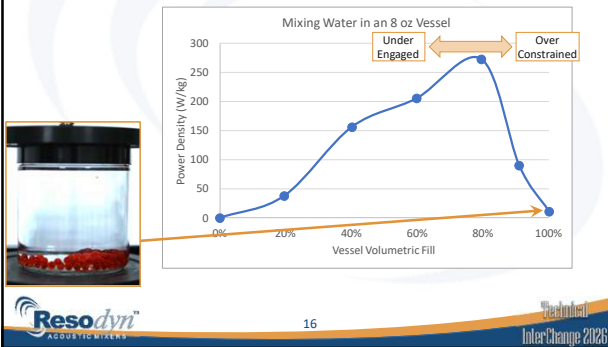

16

Four Uses For Mix Power


1. Optimizing Mixing Parameters and Mixture Ingredients for Production
2. Identify Changes to the Mix Regime
3. Identifying Changes in Material Properties
4. Check for Irregularities in Mixing Performance for Established Processes



17

2. Identifying Changing Mixing Regimes

Sudden Changes in Power to Mix May Indicate Changes in the Mixing Regime

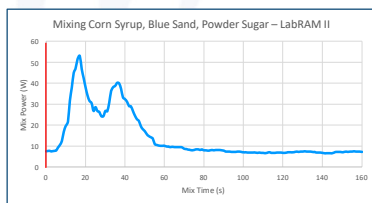


18

1. Optimizing Mix Parameters

Question:

Does Order of Addition affect Mixing Effectiveness?

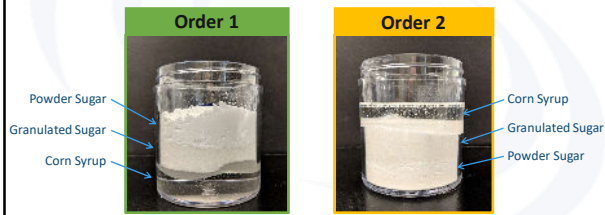

Resodyn
ACOUSTIC MIXERS



19

InterChange 2026

19

1. Optimizing Mix Parameters

Mix Power Identifies Optimal Order Of Addition

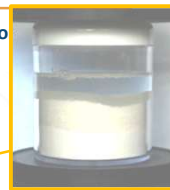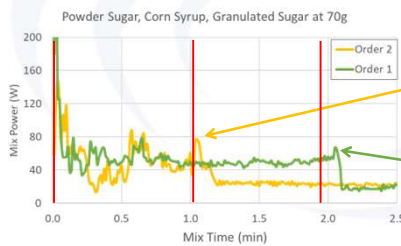

Resodyn
ACOUSTIC MIXERS


20

InterChange 2026

20

2. Identifying Changing Mixing Regimes

Gradual Changes in Mix Power Identify Changing Material Properties

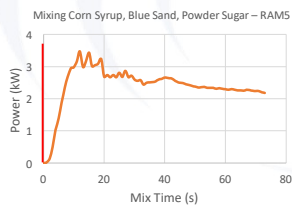

Mixing

Resodyn
ACOUSTIC MIXERS

21

InterChange 2026

21

2. Identifying Changing Mixing Regimes

Question:


Can you determine when the mixing regime changes?



22

2. Identifying Changing Mixing Regimes


Sudden Changes in Power to Mix May Indicate Changes in the Mixing Regime

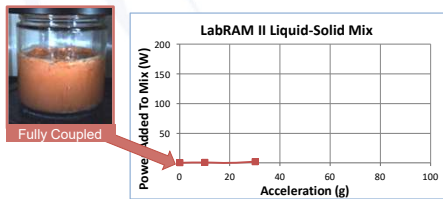

23

2. Identifying Changing Mixing Regimes


Sudden Changes in Power to Mix May Indicate Changes in the Mixing Regime

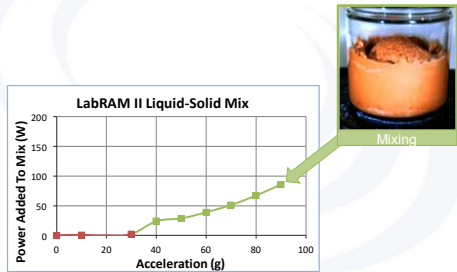

24

2. Identifying Changing Mixing Regimes


Sudden Changes in Power to Mix May Indicate Changes in the Mixing Regime

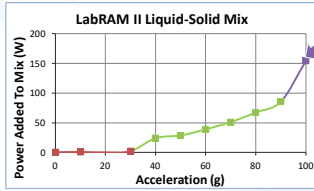

25

2. Identifying Changing Mixing Regimes


Sudden Changes in Power to Mix May Indicate Changes in the Mixing Regime

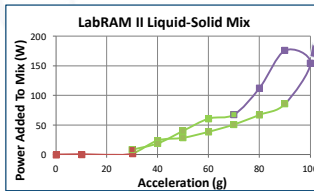

26

2. Identifying Changing Mixing Regimes


Gradual Changes in Mix Power Identify Changing Material Properties

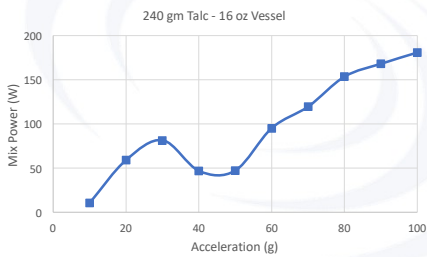

27

2. Identifying Changing Mixing Regimes


Gradual Changes in Mix Power Identify Changing Material Properties

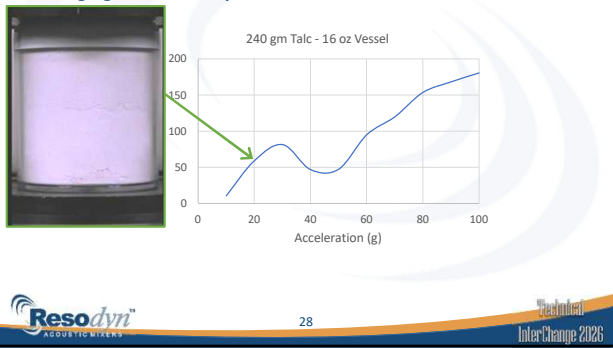

28

2. Identifying Changing Mixing Regimes


Gradual Changes in Mix Power Identify Changing Material Properties

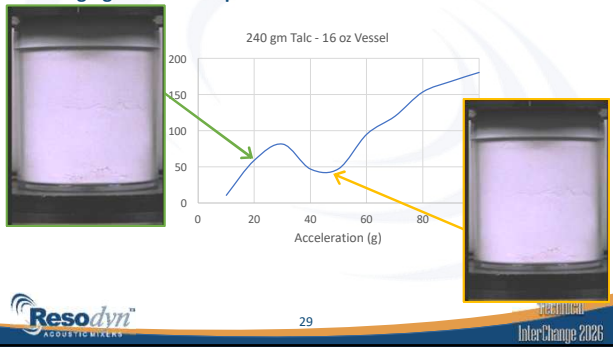

29

2. Identifying Changing Mixing Regimes

Gradual Changes in Mix Power Identify Changing Material Properties

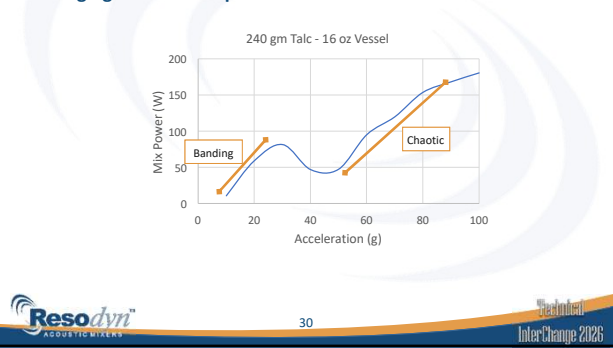

30


Four Uses For Mix Power

1. Optimizing Mixing Parameters and Mixture Ingredients for Production
2. Identify Changes to the Mix Regime
3. Identifying Changes in Material Properties
4. Check for Irregularities in Mixing Performance for Established Processes

31

3. Identifying Changing Mix Properties


Gradual Changes in Mix Power May Identify Changing Material Properties

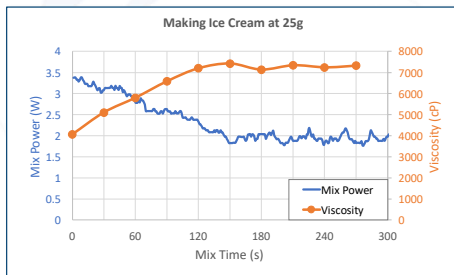

32

3. Identifying Changing Mix Properties

Mix Power Can be used to Identify and Prevent Changing Material Properties During RAM5 Testing

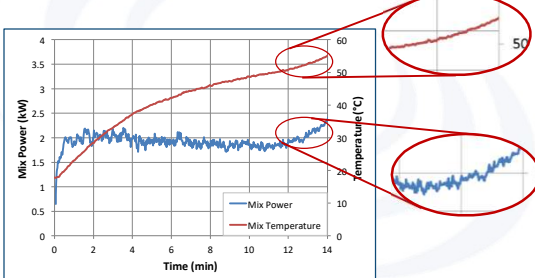

33


Four Uses For Mix Power

1. Optimizing Mixing Parameters and Mixture Ingredients for Production
2. Identify Changes to the Mix Regime
3. Identifying Changes in Material Properties
4. Check for Irregularities in Mixing Performance for Established Processes

34


4. Evaluating Mixing Consistency

Question: Can RAM Mixing Power be used to evaluate consistency of the RAM Mixer between runs?

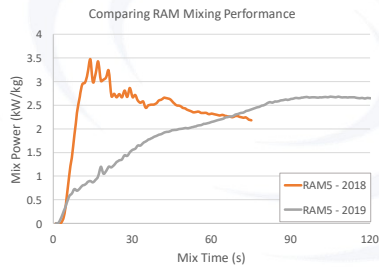

35

4. Evaluating Mixing Consistency

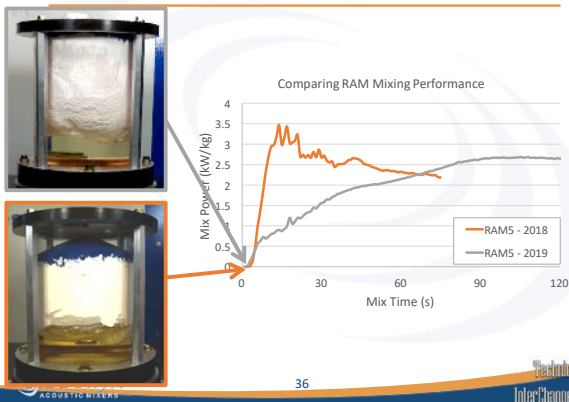


36

4. Evaluating Mixing Consistency

Mix power is used as a quality control parameter using bi-modal PBX simulant

Mix Ingredients	Run Number	
	1 - 10	11
Component (Density)	%Wt	%Wt
R-45 HTLO	5.17	5.17
DOA	5.17	5.17
Lecithin	0.17	0.17
Hollow Glass Spheres	23.53	89.49
Solid Glass Spheres	65.96	0


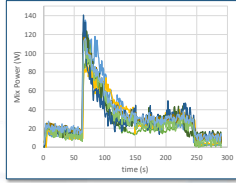


37

4. Evaluating Mixing Consistency

Mix power is used as a quality control parameter using bi-modal PBX simulant

Mix Ingredients	Run Number	
	1 - 10	11
Component (Density)	%Wt	%Wt
R-45 HTLO	5.17	5.17
DOA	5.17	5.17
Lecithin	0.17	0.17
Hollow Glass Spheres	23.53	89.49
Solid Glass Spheres	65.96	0

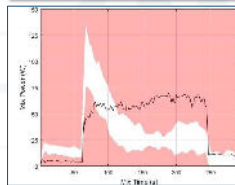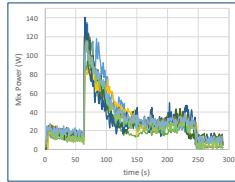

38

Summary

- RAM presents several processing advantages that can be non-intuitive compared to conventional processes
- Mix Power measures the rate at which work is done on your mix material
- Mix power aids understanding and improves the effectiveness of your mixing operation
 1. Optimizing Mixing Parameters and Mixture Ingredients for Production
 2. Identify Changes to the Mix Regime
 3. Identifying Changes in Material Properties
 4. Check for Irregularities in Mixing Performance for Established Processes

39



40
